


MODEL 627856x54

REPAIR PARTS ENGINE

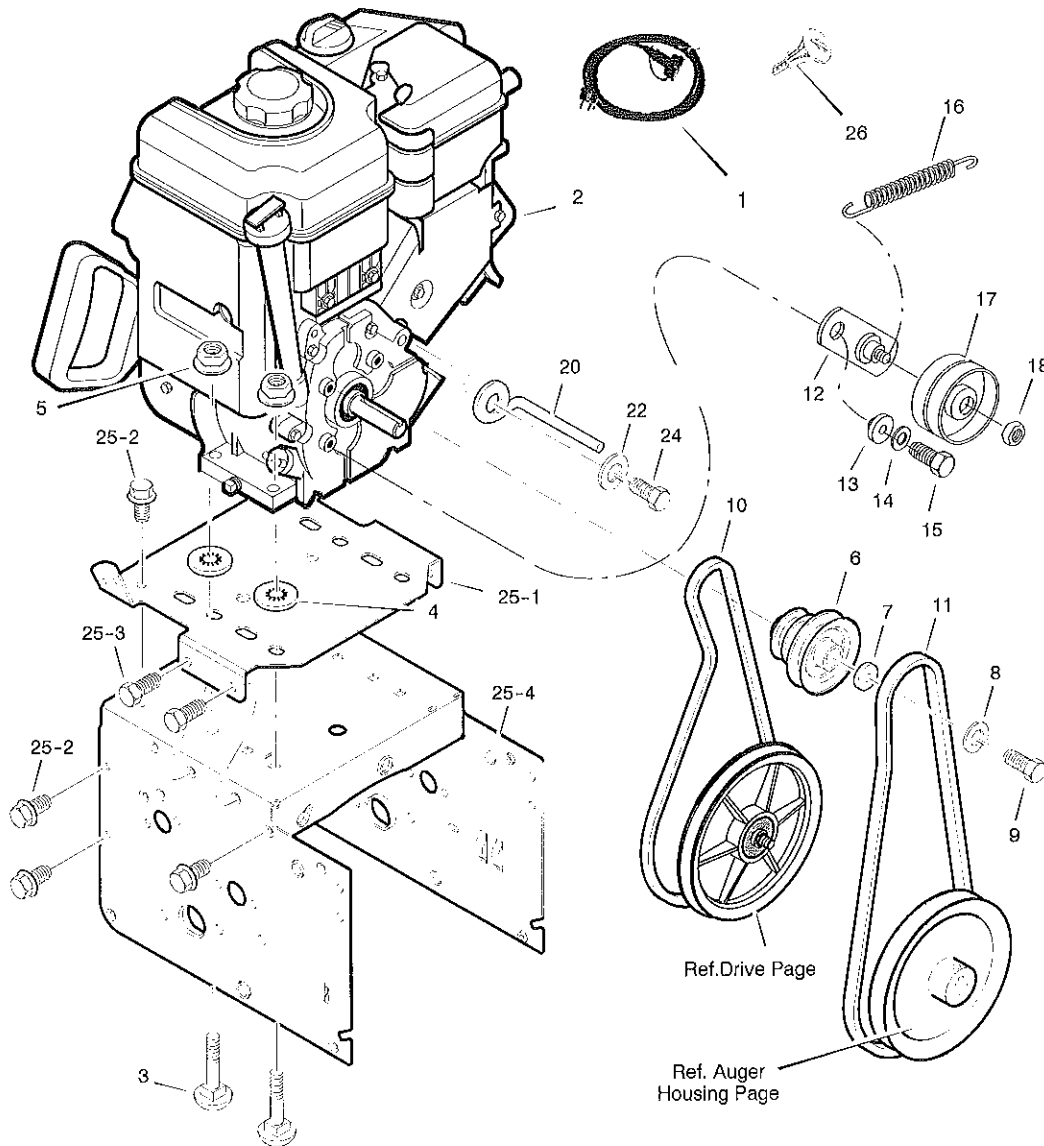


Key No.	Part No.	Description
1	1502114	CORD, STARTER
2	-----	ENGINE
3	002x97	BOLT, CARRIAGE
4	026x76	RETAINER, PUSH
5	710026	NUT
6	1501109	PULLEY, ENGINE
7	17x170	WASHER
8	71063	WASHER
9	71015	SCREW
10	579932	BELT, DRIVE V 4L
11	585416	BELT, AUGER V 3L
12	1501112 YZ	BRACKET ASSEMBLY, IDLER
13	1501065	BUSHING, IDLER BRACKET
14	71060	WASHER, SPLIT
15	710097	SCREW 5/16-24 X .75

Key No.	Part No.	Description
16	53704	SPRING, IDLER TRACTION DRIVE
17	1502120	PULLEY, IDLER
18	590	NUT, JAM 3/8-16
20	1501201	GUIDE, ROD BELT
22	71060	WASHER
24	710097	SCREW
25	-----	FRAME ASSEMBLY
25-1	1501062E245	PLATE, ENGINE
25-2	310169	SCREW
25-3	25x020	SCREW
25-4	1501666E245	MOTOR BOX
26	1501214	KEY, BRIGGS ENGINE
--	406944	OWNER'S MANUAL EURO
--	408551	OWNER'S MANUAL SCAN
--	408552	OWNER'S MANUAL EBLOC/BALTIC

MODEL 627856x54

REPAIR PARTS DRIVE

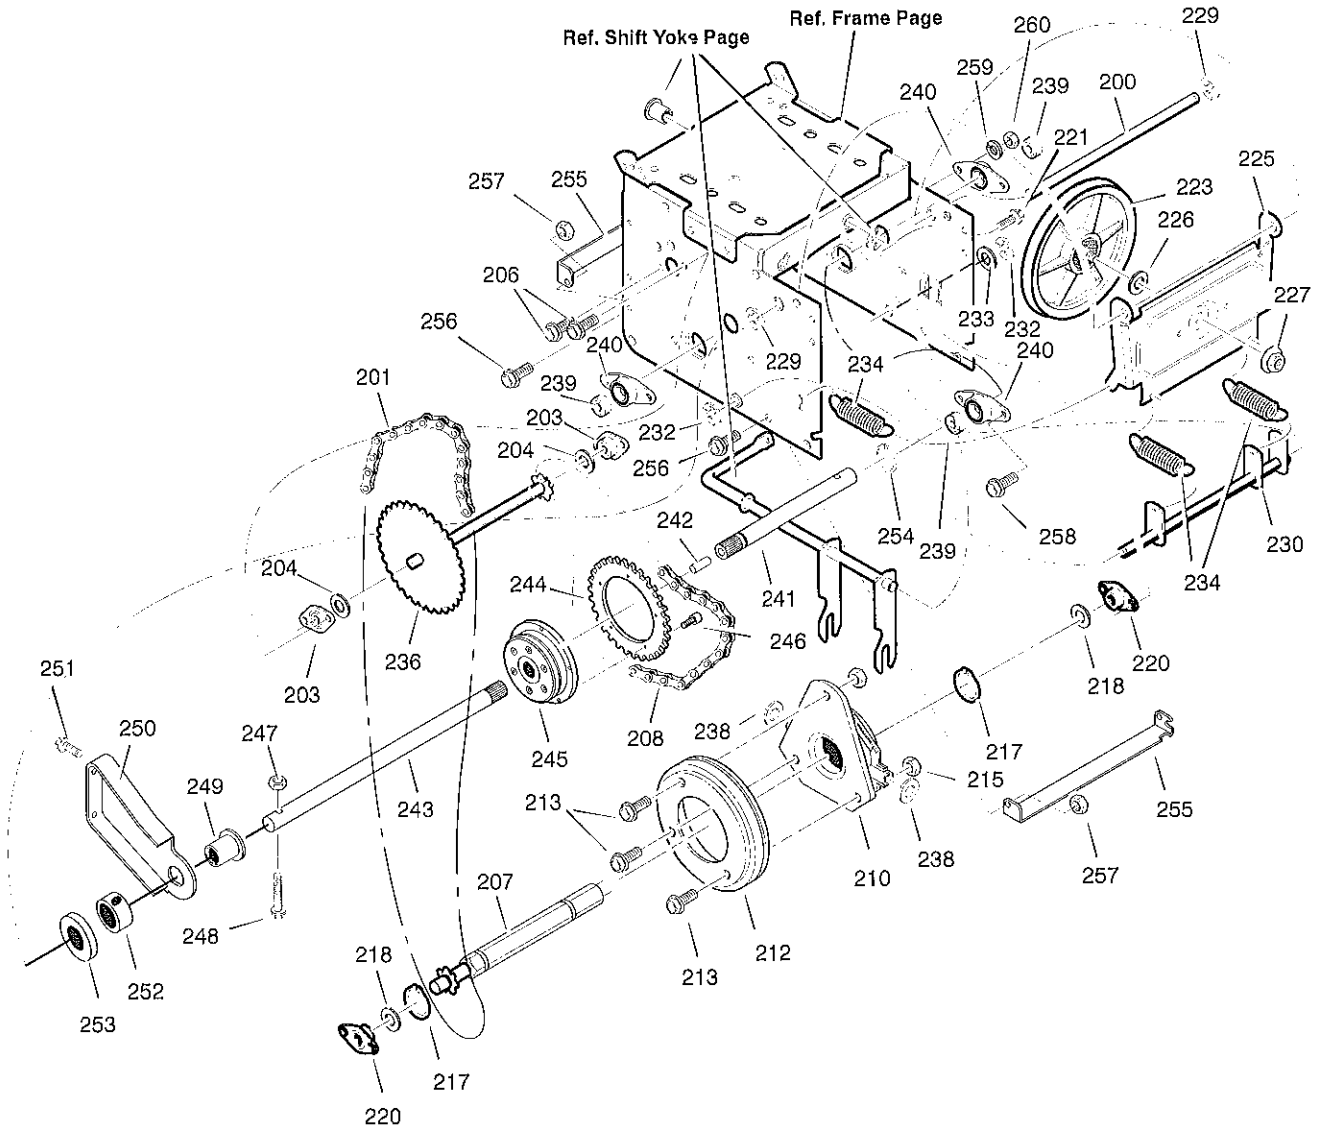


MODEL 627856x54

REPAIR PARTS DRIVE

Key No.	Part No.	Description
200	1501092 YZ	LF AXLE, SWING PLATE YZ
201	579851	CHAIN, ROLLER #420x19.00
203	334163	BEARING AND RETAINER, ASSY
204	579858	WASHER
206	25x020	SCREW, TAP 5/16-18x0.5
207	1501630	ASSY, HEX SHAFT
208	579868	CHAIN, ROLLER #420x18.00 LG
210	337029	BEARING, TRUNION CLUTCH R
212	1501435	WHEEL, FRICTION DISC
213	001x38	BOLT
215	303008	NUT, KEPS HEX 1/4-20
217	579859	RING, RETEXT
218	579858	WASHER
220	334163	BEARING AND RETAINER, ASSY
221	25x020	SCREW, TAP 5/16-18 x .5
223	1501115	FRICTION PULLY
225	1501057 YZ	LF PLATE, SWINGING YZ
226	1501158	SPACER, FRICTION PULLEY
227	15x114	NUT, FLANGE LOCK 3/8-24
229	11x30	RETAINER, RING
230	1502084 YZ	ASSEMBLY, SPRING LINK STEERABLE
232	11x30	RETAINER, RING
233	017x57	WASHER
234	165x112	SPRING, EXTENSION
236	1501652	SPROCKET SET 33T/7
238	71074	WASHER, FLAT
239	53263	BEARING, BALL
240	50648	RETAINER, BEARING
241	1502106	AXLE, LEFT
242	1502024	PIN, AXLE
243	1502047	AXLE AND BUSHING, RIGHT
244	1501623	SPROCKET
245	1501619	CLUTCH, AUTO LOCK
246	352x3	SCREW
247	15x145	NUT
248	577015	BOLT
249	1501114	BEARING, AXLE
250	1501618 YZ	BRACKET, AXLE SUPPORT
251	25x021	SCREW
252	1501620	COLLAR, LOCKING
253	17x195	WASHER
254	239	RETAINER, RING
255	1502030 YZ	BRACKET, SUPPORT
256	001x38	BOLT
257	780285	NUT
258	001x85	BOLT
259	71062	WASHER
260	71044	NUT

MODEL 627856x54

**REPAIR PARTS
FRAME**

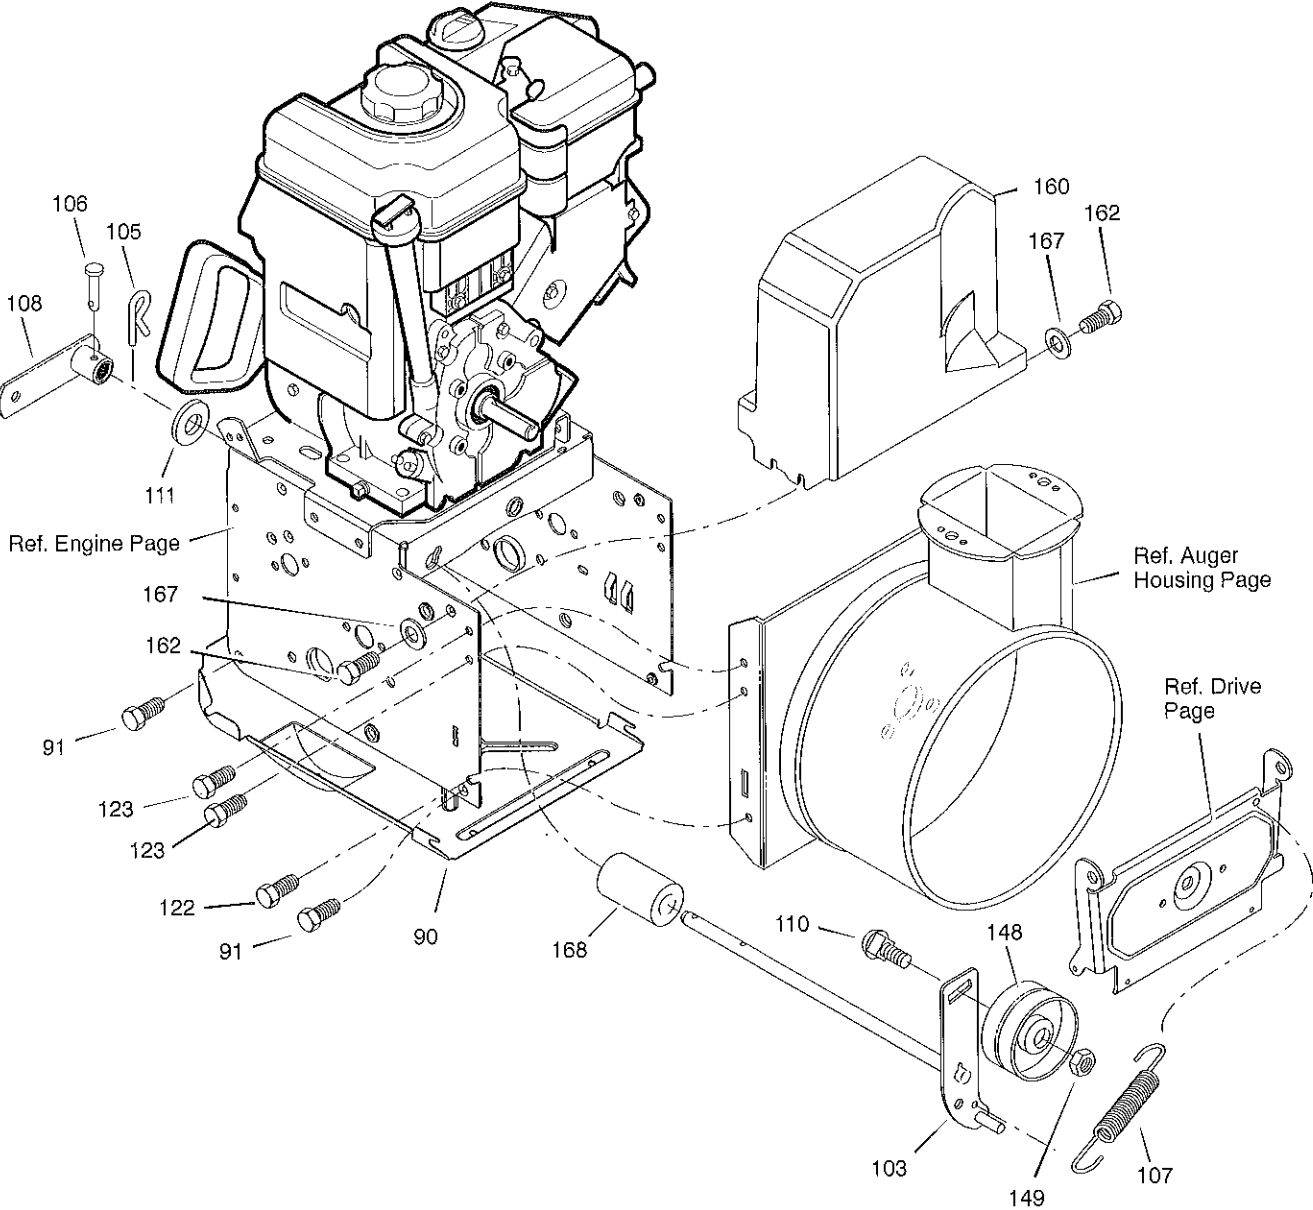


MODEL 627856x54

REPAIR PARTS FRAME

Key No.	Part No.	Description
90	1501055E701	COVER, BOTTOM
91	310169	SCREW, 1/4-20X .63
103	1501369	IDLER ASSEMBLY, AUGER
105	711682	PIN, HAIR .38DIA X 1.64LG
106	761761	PIN, CLEVIS 3/16" DIA
107	165x159	SPRING, TENSION
108	1740172	CONTROL
110	585781	BOLT, 3/8-16X1.25 CARR.
111	711617	WASHER, FLAT
122	25x020	SCREW, TAP 5/16-18 X .50
123	25x021	SCREW, TAP 5/16-18 X .75
148	1502120	PULLEY, IDLER
149	590	NUT, JAM 3/8-16
160	1502169	COVER, BELT
162	26x306	SCREW, TAP
167	71067	WASHER, FLAT
168	1502041	SPACER, AUGER BRACKET

MODEL 627856x54

REPAIR PARTS AUGER HOUSING

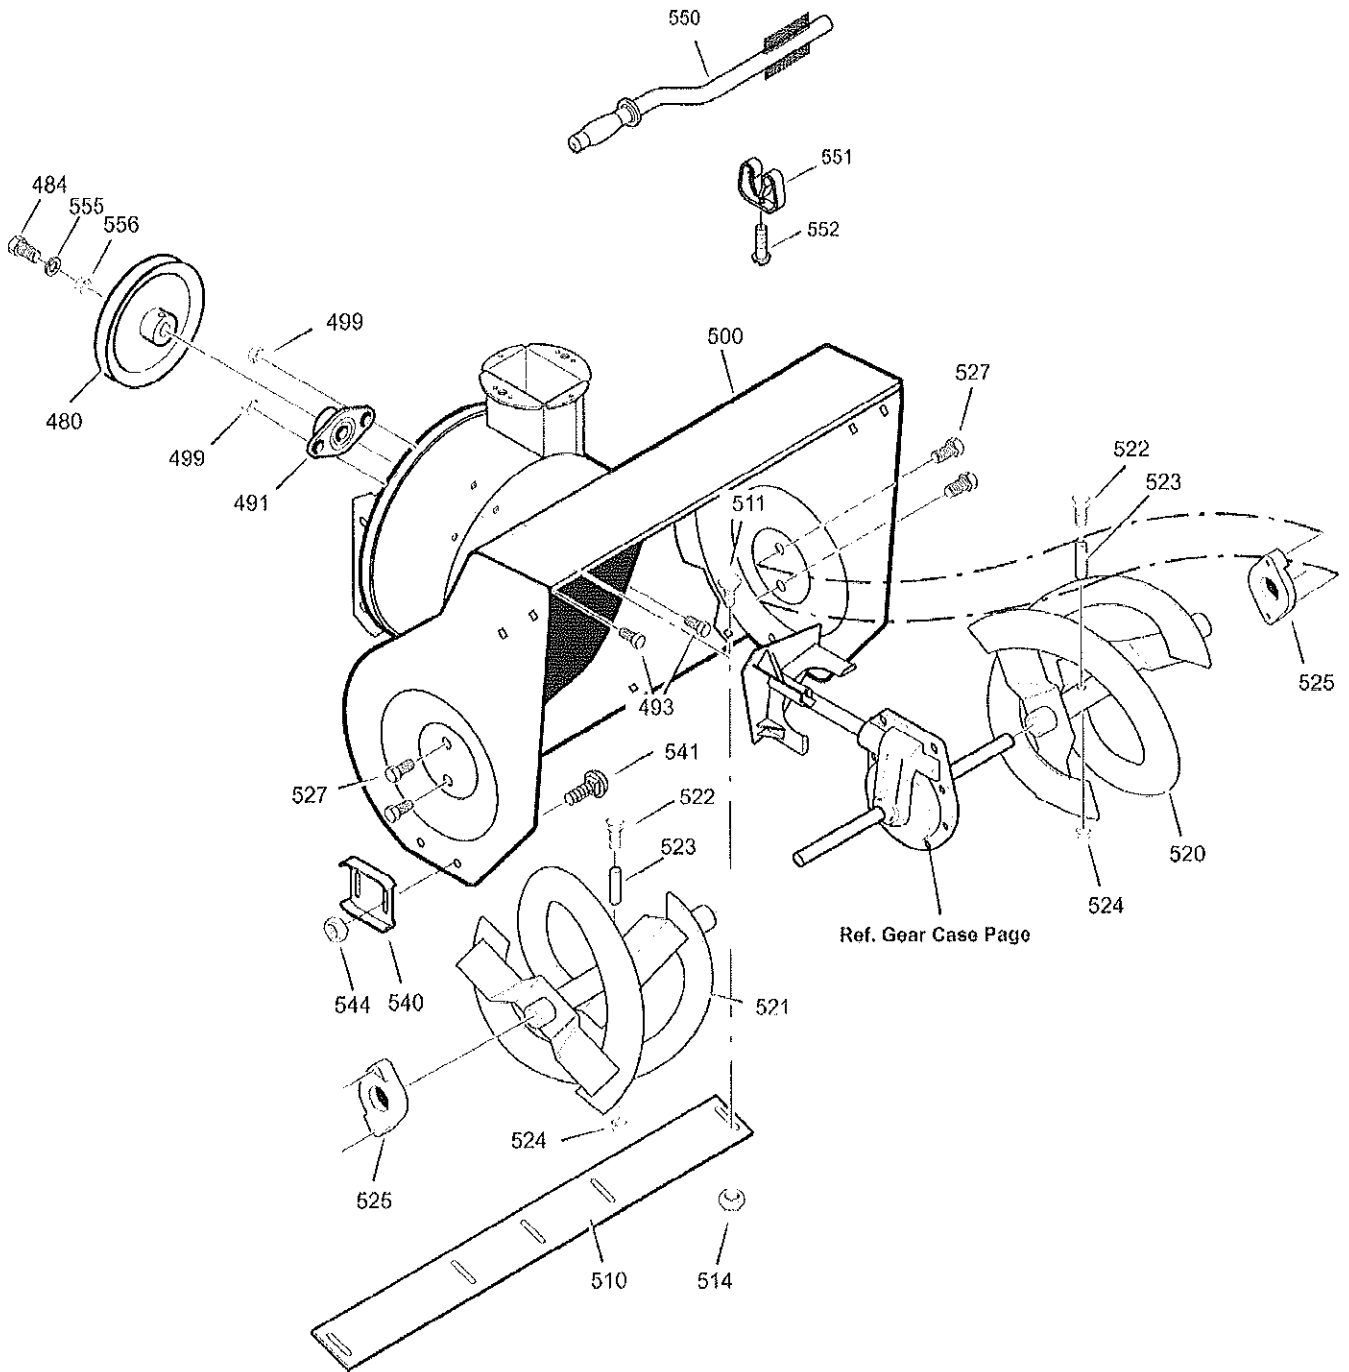


MODEL 627856x54

REPAIR PARTS AUGER HOUSING

Key No.	Part No.	Description
	480	1740177 PULLEY, 4L 8.40 OD
	484	74950512 CAPSCREW
	485	1501158 SPACER, FRICTION PULLEY
⇒	491	1740171 BEARING, FLANGE
	493	001x92 BOLT, HEX 5/16-18X .50
	499	710026 NUT, 5/16-18 HEXWDFLLK
	500	1740122E245 HOUSING, ASSY
	510	760655E701 BLADE, SCRAPER
	511	001x45 BOLT, 5/16-18X.62
	514	710026 NUT, 5/16-18
	520	1740174E736 AUGER, ASSY, LH
	521	1740173E736 AUGER, ASSY, RH
	522	9524 SCREW, 1/4-20 X 1.75
	523	3943 SPACER, SLEEVE
	524	73826 NUT, 1/4-20
⇒	525	1740182 BEARING, FLANGE
	527	25x021 SCREW, 5/16-18X .75
	540	1740176E736 SKID, HEIGHT ADJUST
	541	340720 BOLT, 5/16-18 X .75
	544	710026 NUT, 5/16-18
	550	1740179 TOOL, CLEANOUT
	551	1740180 CLIP, CLEANOUT TOOL
	552	174189 SCREW
	555	710060 WASHER,SPLIT
	556	19111507 WASHER,FLAT
- -	1501216	KIT, SHEAR BOLT

MODEL 627856x54

REPAIR PARTS HANDLE

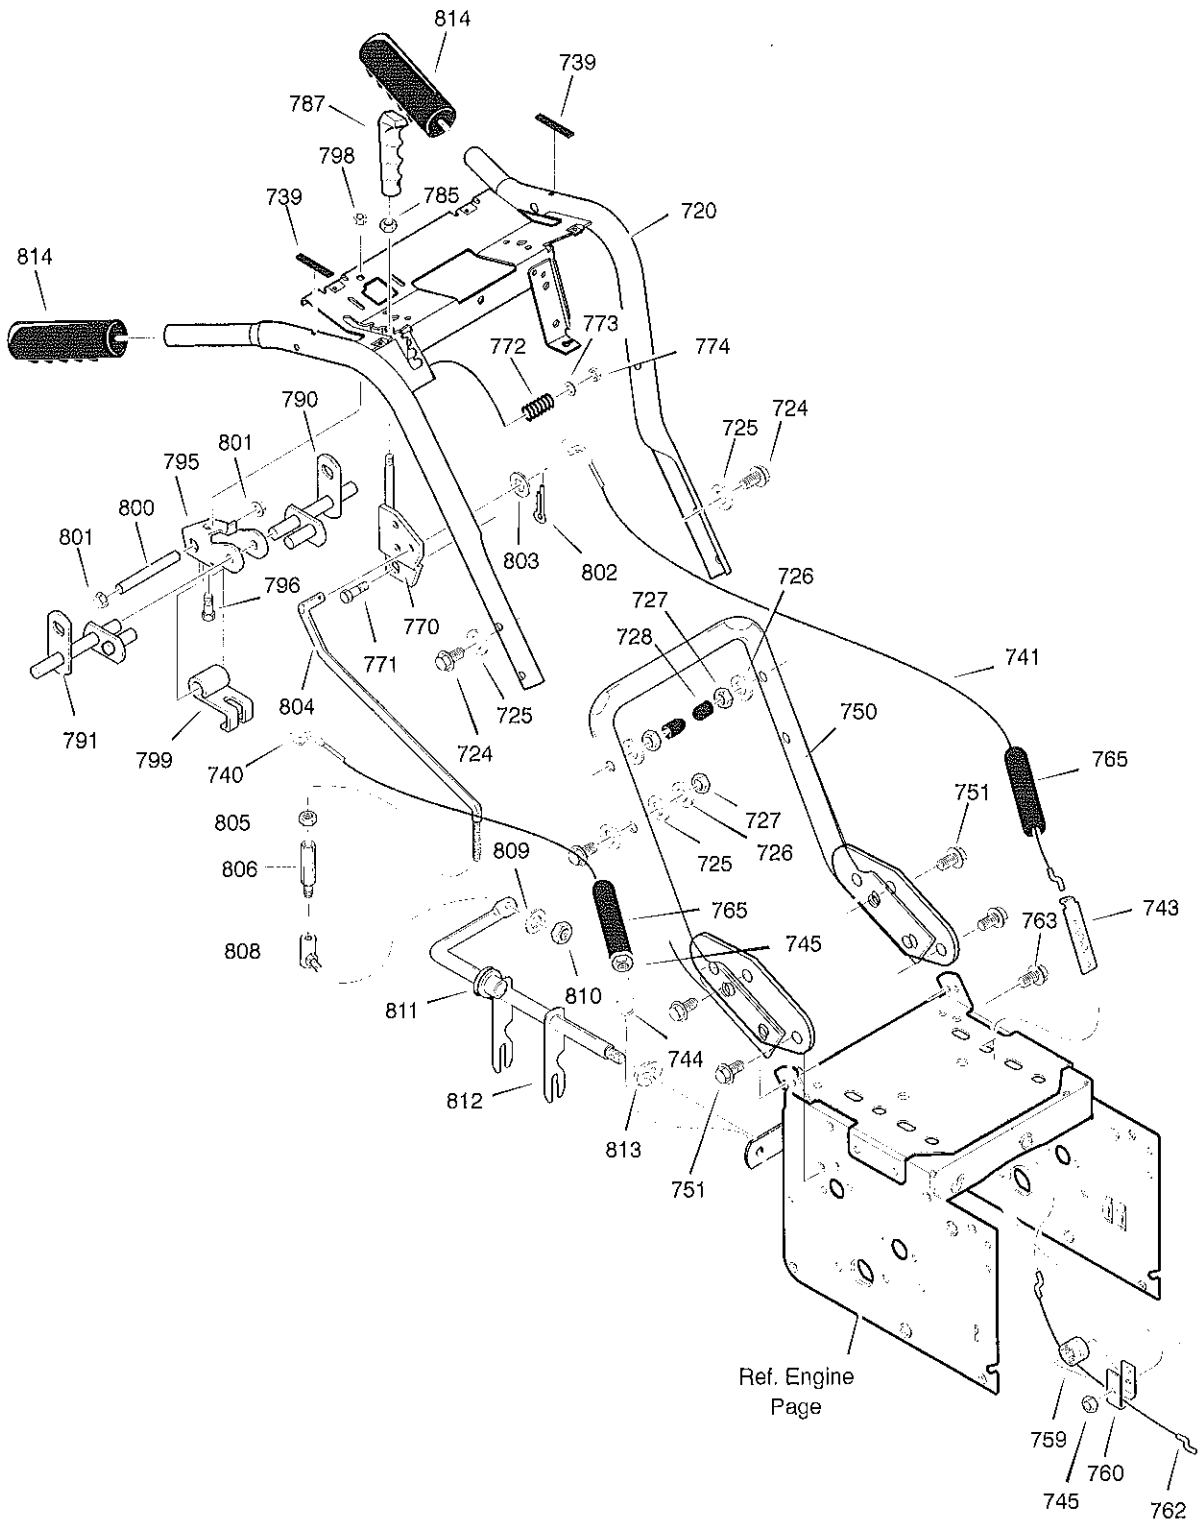


MODEL 627856x54

REPAIR PARTS HANDLE

Key No.	Part No.	Description	Key No.	Part No.	Description
720	1501419E736	ASSY, HANDLE	774	83923	NUT, HEX
724	7288	SCREW	785	71045	NUT, HEX
725	71072	WASHER, FLAT	787	307380	KNOB, SHIFT
726	71062	WASHER	790	578926	ROD, ASSY LH
727	71044	NUT	791	578924	ROD, ASSY RH
728	7289	STOP, PLASTIC	795	579002	BRACKET, CAM
729	337399	GRIP, HANDLE	796	002x53	SCREW
739	4049	BUMPER	798	71038	NUT, NYLOCK
740	1501451	CABLE, AUGER CLUTCH	799	8417	CAM LOCK
741	1501452	CABLE, DRIVE	800	584673	PIN, SPRING PIVOT
743	313441	BRKT, CABLE ADJ	801	73664	NUT, PUSH ON
744	1673	SPRING, CLUTCH	802	65322	PIN, HAIR
745	73800400	NUT, HEX	803	71071	FLATWASHER
750	1501449E736	HANDLE, LOWER	804	1501728	ROD, SPEED CONTROL
751	1740291	SCREW	805	71042	NUT, 5/16-18
759	579860	SPOOL, CABLE	806	6352	ADAPTER, ROD
760	1501059 YZ	BRKT, SPOOL	808	50782	BALLJOINT, STEEL
762	1501122	CABLE, LOWER DRIVE	809	71060	WASHER
763	001798	BOLT, HEX 1/4-20 x 1.5	810	71042	NUT, 5/16-18
765	308146	BOOT, CABLE	811	579944	BEARING, FL
770	1501570 YZ	BRACKET, SHIFT	812	1501110 YZ	ROD, YOKE
771	4058	SCREW	813	11X30	RETAINER, RING
772	50786	SPRING	814	337399	GRIP
773	71072	WASHER, FLAT			

MODEL 627856x54


REPAIR PARTS HEADLIGHT

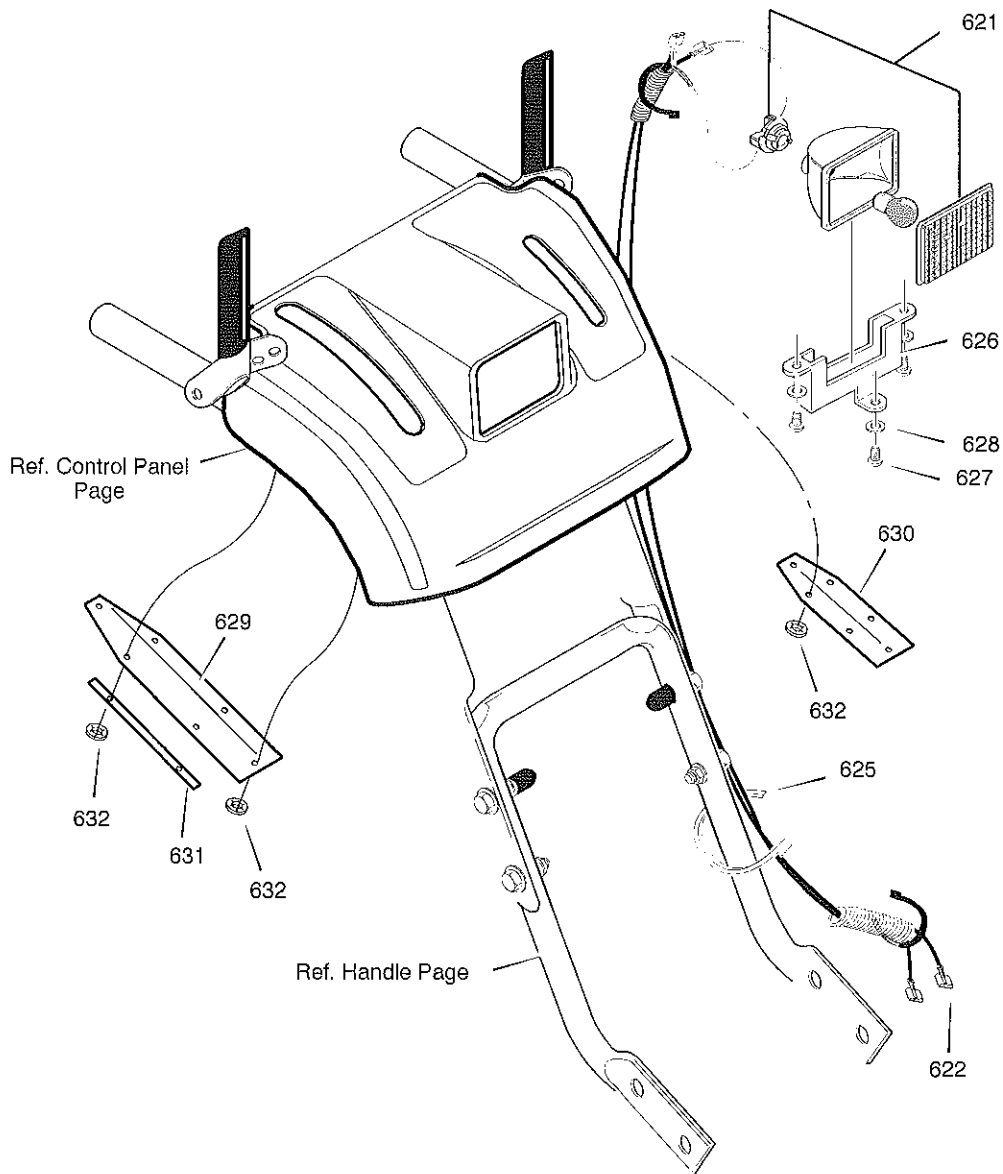

Key No.	Part No.	Description
621	762343	LIGHT, HALOGEN
622	1501455	HARNESS, WIRE
625	66426	TIE, CABLE
626	578921	BRACKET, LIGHT
627	901696	SCREW #8 X .50
628	901736	WASHER, FLAT
629	1501401	COVER
630	1501402	COVER
631	1501330	FRAME
632	028x79	NUT, PUSH

MODEL 627856x54


REPAIR PARTS CONTROL PANEL

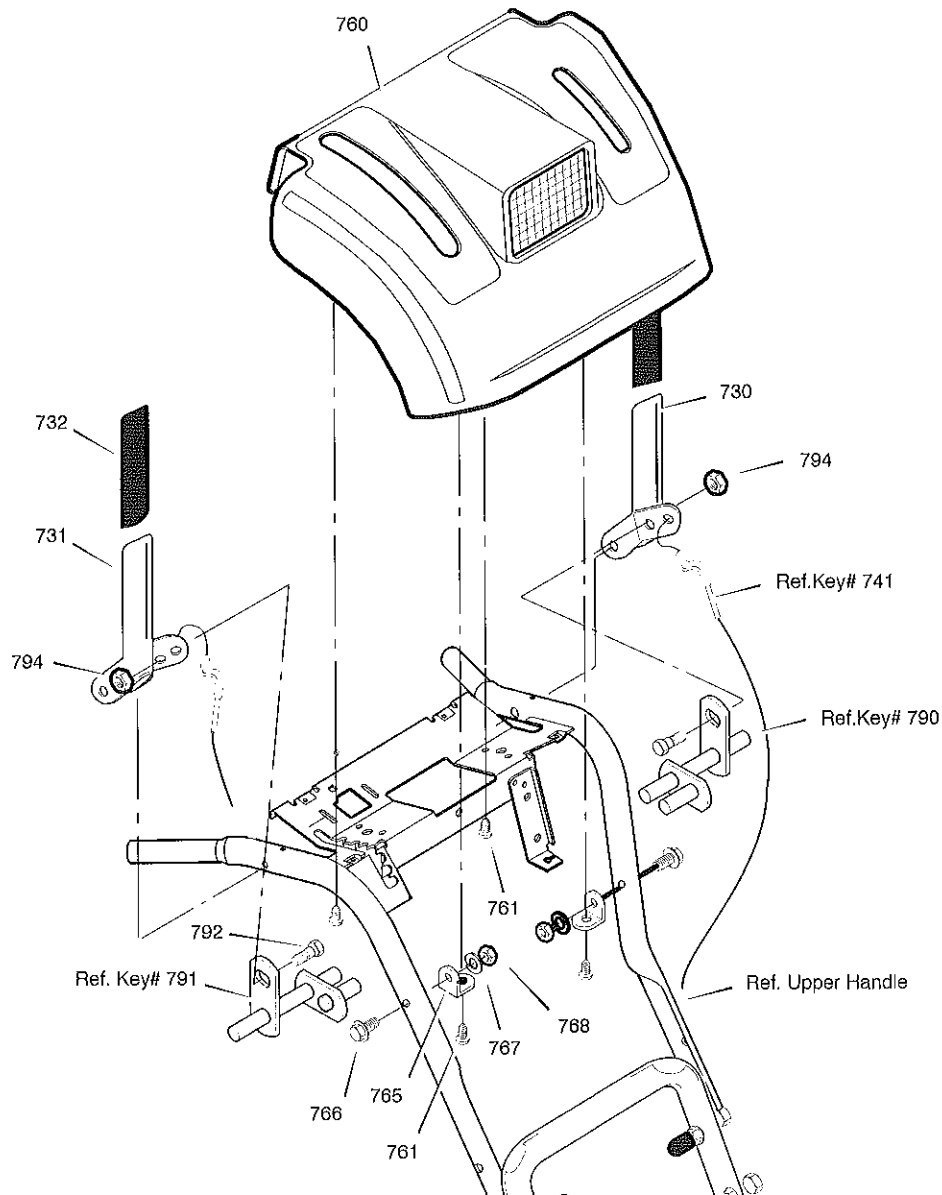

Key No.	Part No.	Description	Key No.	Part No.	Description
730	1501358E717	CLUTCH HANDLE LH	766	74780528	SCREW, 5/16-18 X 1.75
731	1501357E717	CLUTCH HANDLE RH	767	71060	WASHER
732	337380	GRIP, CLUTCH LEVER	768	15X144	NUT, 5/16-18
760	1501327	PANEL, CONTROL	792	905531	BOLT, 1/4-20 X 0.50
761	316042	SCREW	794	908913	NUT, 1/4-20
765	578866E736	BRACKET, PANEL			

MODEL 627856x54

REPAIR PARTS DISCHARGE CHUTE

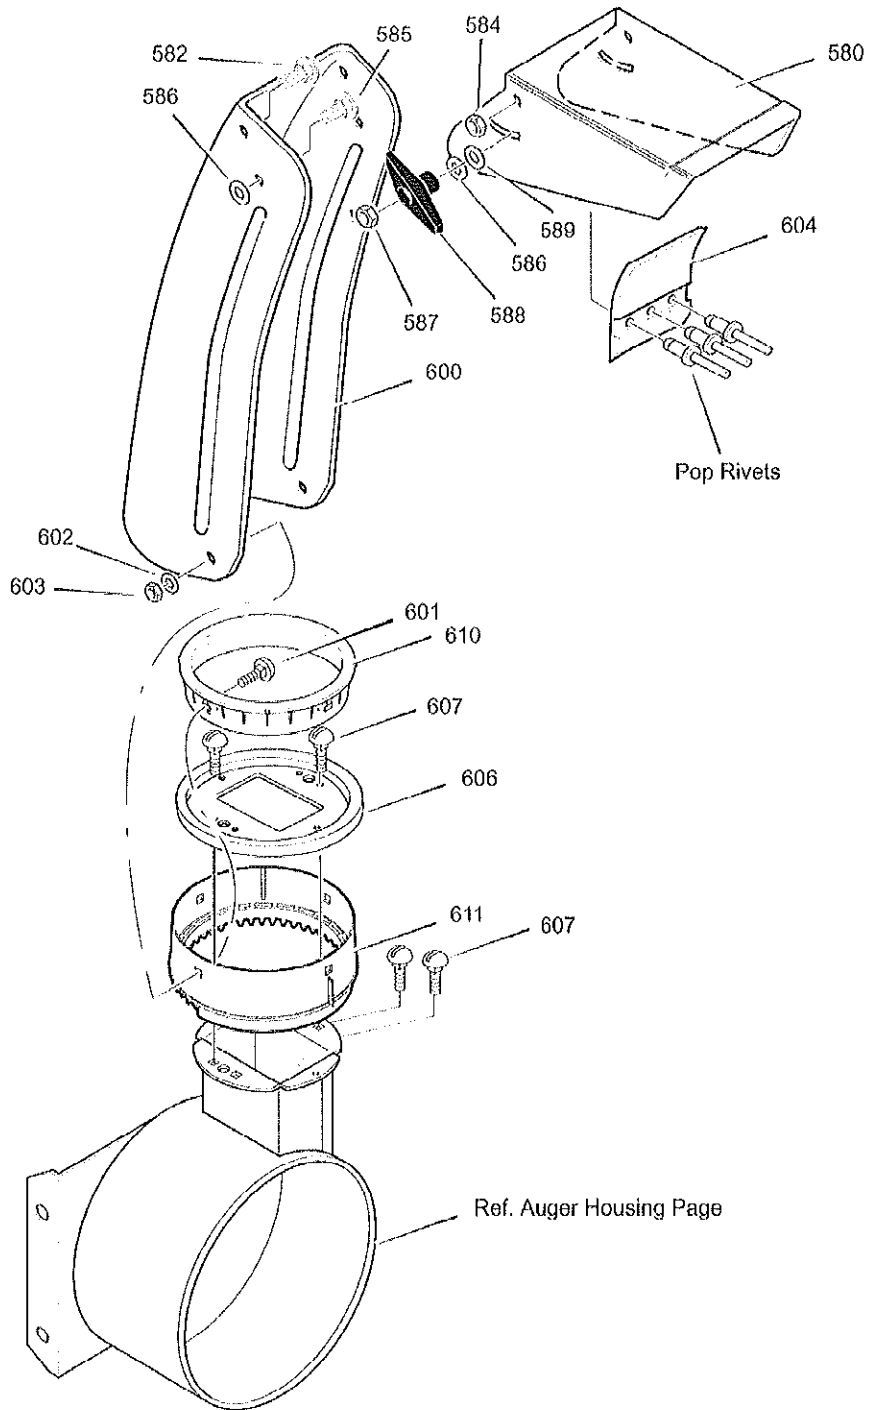


MODEL 627856x54

REPAIR PARTS DISCHARGE CHUTE

Key No.	Part No.	Description
580	761168E717	CHUTE, UPPER W/REMOTE
582	72270506	SCREW, 5/16-18 X.75
584	73800500	NUT
585	72270506	SCREW, 5/16-18 X.75
586	6711	PLASTIC WASHER
587	73800500	NUT
588	1501260	KNOB,T
589	12021	PLASTIC WASHER
600	761329E717	CHUTE, LOWER W/REMOTE
601	2x100	BOLT
602	71071	WASHER, FLAT
603	71038	NUT
604	762322	FLAP
606	1501932 YZ	CHUTE COLLAR
607	405024	BOLT
610	337227	RETAINER, RING INNER
611	1501282	RETAINER, RING OUTER

MODEL 627856x54

REPAIR PARTS CHUTE ROD

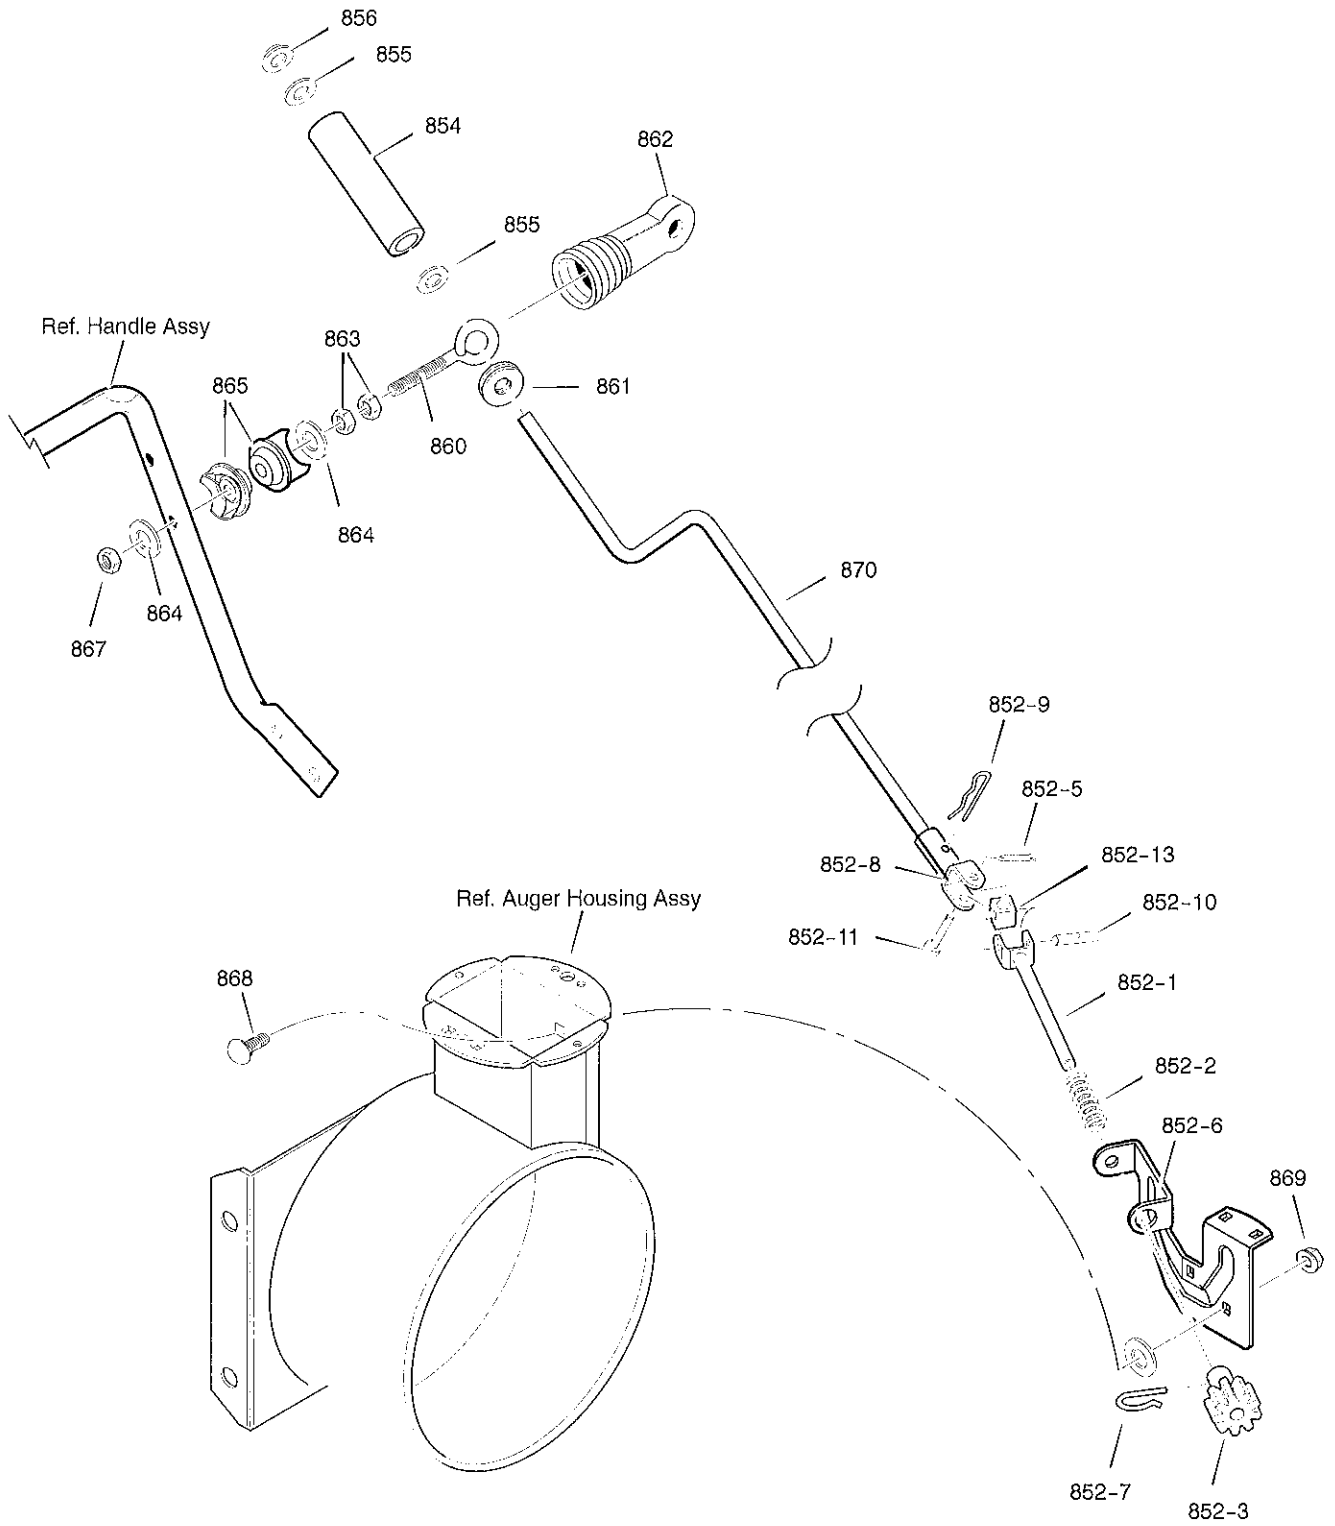


MODEL 627856x54

REPAIR PARTS CHUTE ROD

Key No.	Part No.	Description
852-1	1501533 YZ	ASSEMBLY, YOKE & ROD
852-2	164x37	SPRING
852-3	1501067	GEAR, CHUTE ROTATION 9T
852-5	579493	PIN, COTTER
852-6	1501306E701	BRACKET, CHUTE GEAR
852-7	1501293	PIN, HAIR
852-8	1501075 YZ	ASSEMBLY, YOKE ADAPTER YZ
852-9	711682	PIN, HAIR
852-10	578060	PIN, UNIVERSAL JOINT
852-11	578309	PIN, CLEVIS
852-13	578063	HOUSING, UNIVERSAL
854	307399	KNOB, SLEEVE
855	309312	FLATWASHER
856	73664	NUT, PUSH ON 3/8"
860	1501456	EYE BOLT 3/8-16X6.50
861	148	GROMMET, EYE BOLT
862	1501457	BOOT, EYE BOLT
863	71045	NUT, 3/8-16 HEXJAM
864	71072	FLATWASHER .406X.81X.066
865	309344	ADAPTER, BOOT
867	71046	NUT, 3/8-16 HEXNYL
868	002x98	BOLT, CARRIAGE 1/4-20 X 1.00
869	15x145	NUT, 1/4-20
870	1501523YZ	CRANK, ASSY CHUTE

MODEL 627856x54


REPAIR PARTS WHEELS

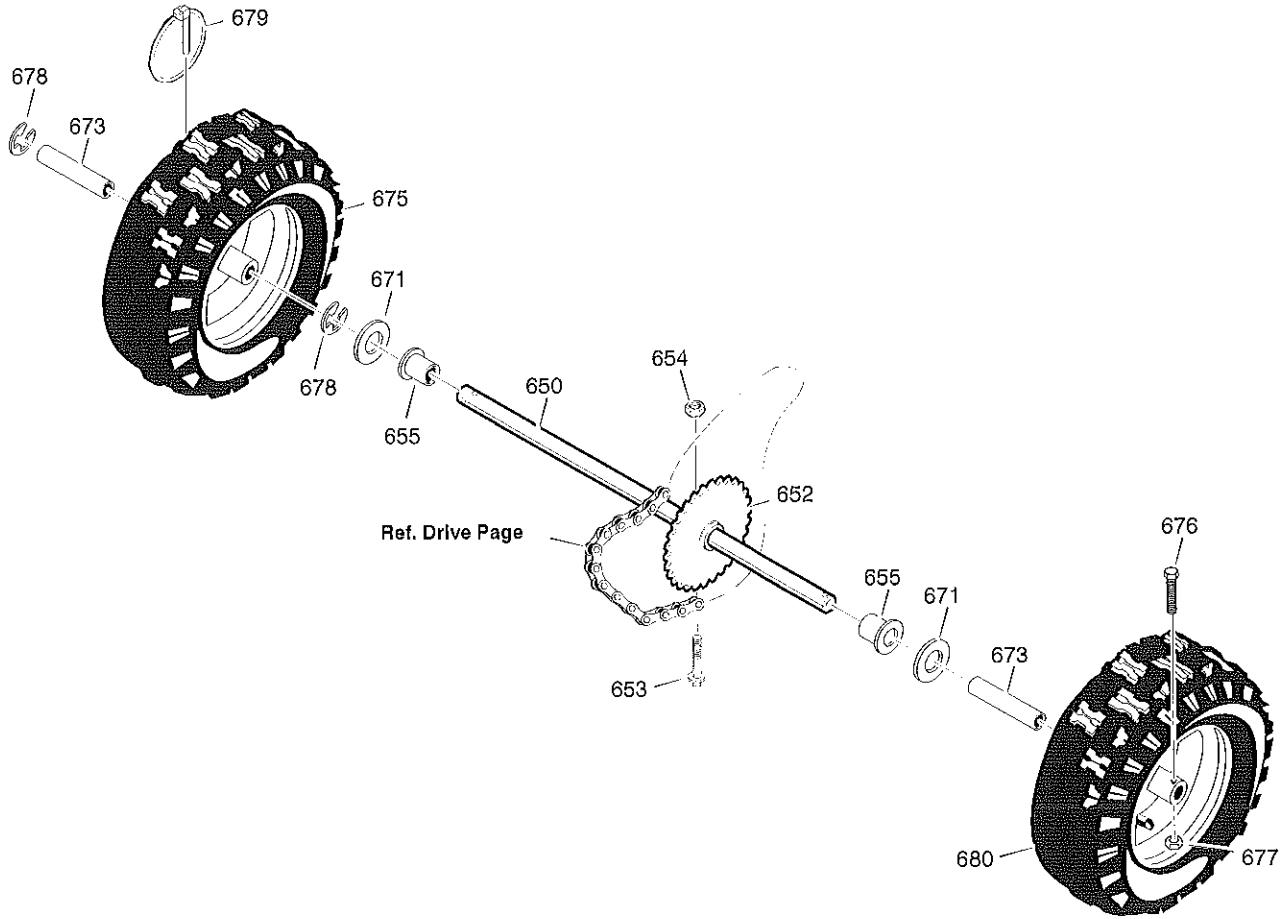

Key No.	Part No.	Description
650	1501563	SHAFT, AXLE
652	1501089	SPRKT & HUB
653	01x193	SCREW, 1/4-20 x 1.75
654	15x145	NUT, 1/4-20 HEX NYLOCK
655	1501114	BEARING, AXLE
671	017x83	FLATWASHER
673	1501138	BUSHING, WHEEL
675	1740159	TIRE & RIM, RIGHT
676	577015	SCREW, 1/4-20X1.75 HH
677	15X145	NUT, 1/4-20 HEX NYLOCK
678	239	RING, RET
679	73842	PIN, KLIK .25 X 1.38 DIA
680	1740158	TIRE & RIM, LEFT

MODEL 627856x54

REPAIR PARTS GEAR CASE

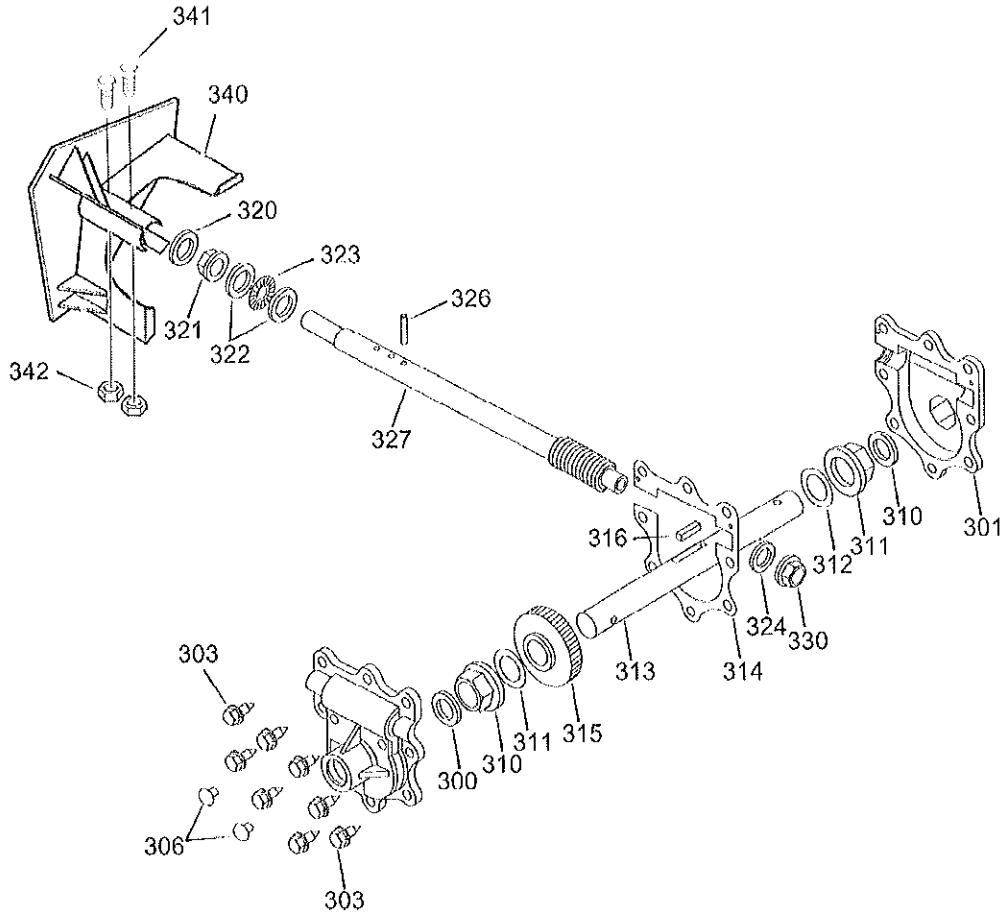

Key No.	Part No.	Description	Key No.	Part No.	Description
300	896	CASE, GEAR, RH	316	73905	KEY, WOODRUFF #91
301	895	CASE, GEAR, LH	320	53737	RING, QUAD 0.924 ID
303	910828	SCREW, 5/16-24 x 1.00	321	583126	BEARING, FLANGE
304	71100	NUT, 5/16-24	322	48275	WASHER, FLAT
305	330434	SCREW, 5/16-24 x 1.50	323	50684	BEARING, ROLLER
306	53749	PLUG, PIPE 0.25-18	324	48275	WASHER, FLAT
310	780151	SEAL, OIL	326	50795	KEY
311	53743	BEARING, SLEEVE	327	53732	WORM
312	53748	WASHER, FLAT	330	53731	BEARING, SLEEVE
313	760528	SHAFT, AUGER OUTPUT	340	175321	IMPELLER
314	897	GASKET, GEAR BOX	341	74780426	CAPSCREW
315	53730	WORM GEAR	342	73600400	NUT, LOCKING
			--	333431	10oz TUBE LUBRIPLATE